

Balloon Gas

Operating Instructions and Safety Guidelines

Operating Instructions

1. Rip off plastic cap from cylinder valve outlet.
2. Screw the pressure regulator or balloon filling adaptor firmly onto cylinder outlet. The adaptor is designed to be screwed tight by hand.
3. Open the hand-operated valve by turning slowly anticlockwise.
4. The balloon filling adaptors available are for either unvalved or valved balloons. The unvalved inflator has a rubber extension nozzle.
 - Put the neck of the balloon over the rubber nozzle, hold the balloon firmly, gently tilt the nozzle to inflate the balloon and release when the desired balloon size is reached.The valved inflator has a brass cone outlet with extension piece.
 - Put the neck of the balloon over the brass cone extension, hold the balloon firmly, gently pull the cone towards the adaptor body to inflate the balloon and release when the desired balloon size is reached.
5. Close the cylinder valve when balloon filling is completed by turning the handwheel clockwise. Then, purge the remaining pressure from the adaptor by bending the rubber nozzle or pulling the brass cone as stated above.
6. Unscrew the adaptor and return it with the cylinder.

Safety Rules

- When in use, always keep the cylinder in vertical position, suitable restraint should be adopted.
- When transporting the cylinder, always ensure it's secure, will not roll around, the valve cannot be knocked and the vehicle is well ventilated.
- Never drop the cylinder.
- Keep cylinder away from heat.
- Never open the cylinder valve unless a pressure regulator or balloon filling adaptor has been screwed into the valve outlet. The gas is at very high pressure and uncontrolled discharge can cause serious injury.
- Never deliberately inhale balloon gas. It is an asphyxiant gas which in large concentrations can cause unconsciousness and possibly death.
- Always keep children and animals away from the cylinder. Balloons might be toys, cylinders are not!

N.B If gas leaks from any part of equipment, do not attempt to rectify the fault, but inform the supplier.

For any further operating and safety information:

Call us on **0800 637737**

email us on **genenq.ALUK@airliquide.com**

visit our website **www.industry.airliquide.co.uk**